Dryer Quick Start Guide

ASKO
T701

We know you're excited about owning an ASKO dryer and you're anxious to get started, so here is a brief summary of the operating procedures. To get the most of the features of your machine, we recommend that you read your *Use and Care Guide*.

THE CONTROL PANEL

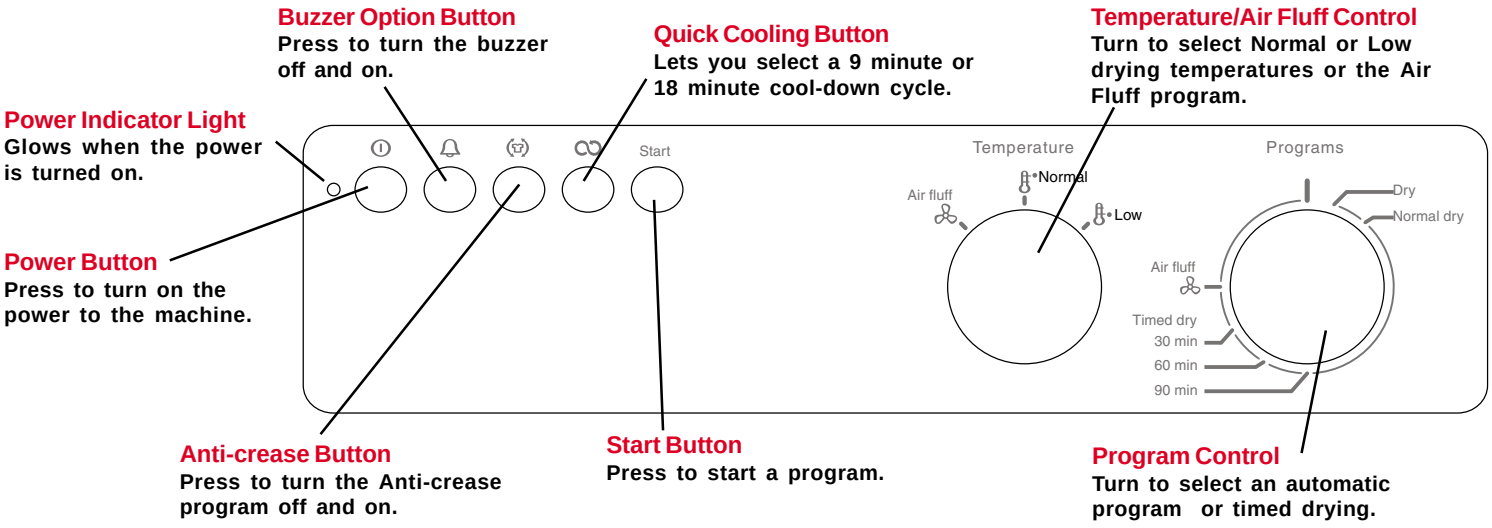

Power Button

The Power button turns the power to the machine on and off. When the power is on, the power indicator light glows red. The power must be on before you can start the machine.

Start Button

This button starts the dryer. If you open the door during a program, the dryer will stop tumbling automatically. To continue the program, close the door and press Start.

Program Control

This model has two automatic programs:

Dry – for heavy items, such as jeans or thick towels

Normal Dry – for cottons, permanent press, synthetics, etc.

These programs work with a thermostat that measures the exhaust temperature coming out of the dryer and automatically turns the machine off when the clothes are appropriately dry.

Timed Drying (30, 60 or 90 minutes)

If you prefer, you can set the Program Control knob to a specific number of minutes to dry the laundry. When you choose timed drying, you must set the Temperature Control to Normal or Low. It is best to select a shorter time; then if the load isn't dry, you can set the timer for a f ew more minutes.

Air Fluff

The Air Fluff program is designed to shake dust out of fabrics, air them, or soften them. This program does not activate the heating element.

Temperature Control

Normal	This temperature setting should be used for heavier fabrics, such as denim, cotton, linen, etc.
Low	This temperature setting should be used for lighter, more delicate fabrics, such as synthetics, permanent press, acrylics, etc.
Air Fluff	This setting does not activate the heating element. It simply circulates the air as the clothes tumble to shake out the dust and refresh the clothes.

QUICK START PROCEDURES T701

1. Press the Power button to turn on the machine.
2. Load the laundry into the dryer.
3. Clean the lint filter (see below).
4. Check that the door is clear of laundry then close it firmly.
5. Turn the Program Control knob to the desired program (Dry or Normal Dry) or Timed dry (90, 60, or 30 minutes).
6. If you select Timed dry, turn the Temperature Control knob to the desired setting (Normal, Low, or Air Fluff).
7. Make your program option selections (e.g., Anti-crease).
8. Press Start. The machine will start.

Options

Buzzer You have the option to turn the buzzer on or off. If you turn the buzzer on, it will sound for three seconds when the program is complete. *Note:* The Cool-down button must also be pressed in for the buzzer to sound.

Anti-crease The Anti-crease option is designed to prevent garments from becoming wrinkled if you're unable to remove them from the dryer right away. When you select this option, after the drying program is complete the drum will continue to rotate for three seconds every minute until the door is opened or one hour has passed. If the buzzer is on, it will sound each time the anti-crease program activates.

Quick Cooling Press this button in to select a Normal Cooling cycle, which is 18 minutes. Release this button to select a Quick Cooling cycle, which is 9 minutes. Please note that Quick Cooling cannot be selected with the Anti-crease option.

Interrupting or Cancelling a Program

To interrupt a program, simply open the door. The dryer will stop tumbling automatically. To continue the program, close the door and press Start. The program will continue from the point it was interrupted.

To cancel a program, turn the Program Control knob clockwise until the dryer stops or press the Power button to turn off the power.

CLEANING THE LINT FILTER

Although the lint in your ASKO dryer will be minimal, the lint filter should be cleaned after each load to ensure maximum air flow and prevent possible overheating. To clean the filter, follow the steps below:

1. Grasp the handle and pull it toward you.
2. Remove the filter from the holder by pulling it up.
3. Open the filter and gently brush away any lint.
4. Fold the filter together and return it to the holder on the door.
5. Push the holder in until it snaps into place

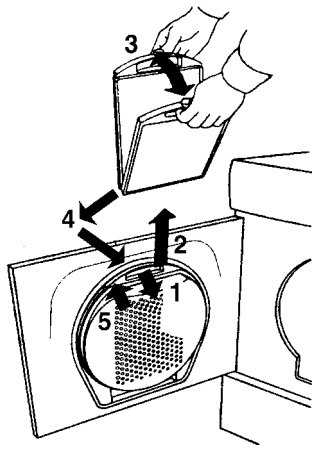

NOTE: **We recommend that you clean the lint filter after every load.**

OVERHEATING PROTECTION

The dryer has a protection device that shuts the machine off if the temperature becomes too high. Overheating could occur if the lint filter is clogged or the fan needs to be cleaned. If the dryer shuts off during a program, check the lint filter first. If it is clean, it could be the fan needs to be cleaned. See page 3 in your *Use and Care Guide* for more details.

Refer to your *Use and Care Guide* for additional programming and operational information as well as care and cleaning instructions.